## **Selas TFR Package Burners**

#### **TFR Burner D-150**

Parameter	Specifications					
Integral Blower Motor, HP	2					
Maximum Input, BTU/hr (kW)¹	Integral Blower	2,047,000 (540)				
waxiiiuiii iiiput, 610/iii (kw)	External Blower	3,000,000 (791)				
Low Firing Rate, BTU/hr (kW)¹	75,000 (20)					
Pilot Output, BTU/hr (kW)¹	75,000 (20)					
Nominal Operating Gas Pressure at Burner H "w.c. (mbar) <sup>2</sup> - Natural Gas	7.5 (19)					
Nominal Operating Air Pressure at Burner Ho "w.c. (mbar) <sup>2</sup>	5.5 (14)					
Tube Diameter, inches (mm)	6 (153)					
Maximum Tube Length, ft . (m)	75 (22.9)					
Piping	NPT					
Ignition Type	Pilot					
Flame Detection	Flame rod or UV scanner					
Fuels	Natural Gas or Propane					
Conformance	NFPA*86 C					

All imperial inputs based on gross calorific values (HHV). All metric inputs based on net calorific values (LHV).

- 1 Maximum, low fire, and pilot inputs are given for the standard, integral air blowers at 1,000 ft elevation. Higher elevations may require a larger capacity blower.
- 2 Values are given for integral blower arrangement at high fire.

Test conditions: Natural gas, Max input at 3% excess  $O_2$ , Low fire at 19% excess  $O_2$ , test fired into effective tube length of 28′.

NOTE: All values are approximate. To check if packages meet other agency requirements, contact the factory. Packages meant for indoor use.


NOTICE: Selas practices a policy of continuous improvement in the design of its products. It reserves the right to change the specifications at any time without prior notice.




### **Data Sheet**

# **Selas TFR Package Burners**

#### **Dimensions**

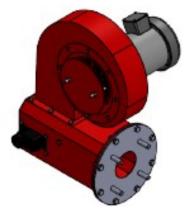

Tube Size	В	С	D	E	G	Н	J	K	М	N	Р	R	Gas Inlet
6	24-1/2	22-1/8	5-29/32	16-1/2	1-1/2	23-1/4	8-3/4	6-3/8	13	8	9-1/2	18mm	2" NPT

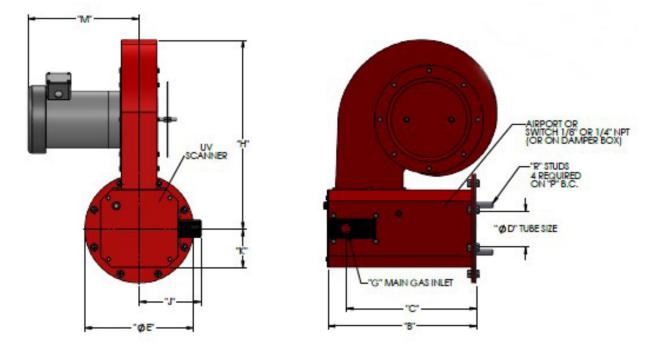


NOTE: All dimensions are in inches  $\pm 1/8$ . Blower mounted sideways on casing w/motor facing mounting plate when no gas train is required. "M" dimension approximate, dependent on motor manufacturer. Dimensions subject to change without notice. Blower may be mounted in other configurations.




### **Data Sheet**

# **Selas TFR Package Burners**

### **Dimensions (continued)**

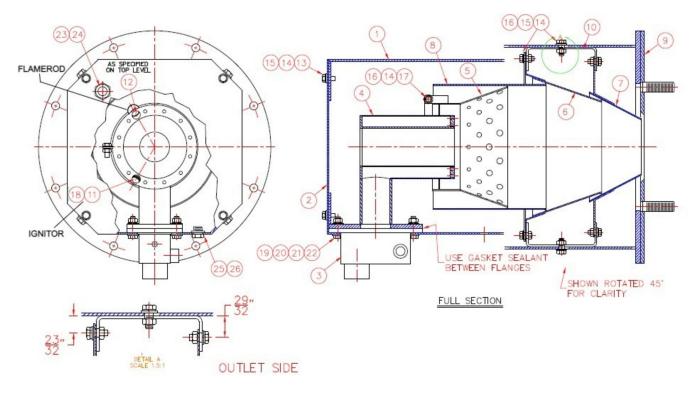

## Mounting

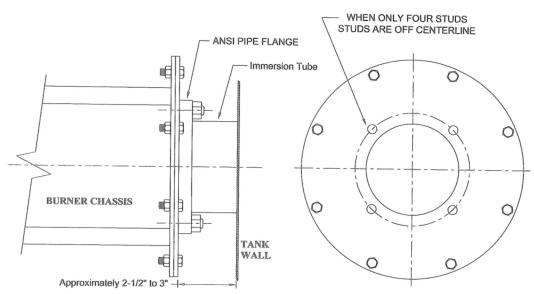

NOTE: Extend the immersion tube out of the tank so that the mounting flange will be approximately 2-1/2" to 3" from the tank wall. This will allow space to reach behind the flange and secure the nuts to the studs.



